

# OWNER'S/ OPERATOR'S MANUAL

## MODEL NO.'s

**PLR-48**

**PLR-60**

**PLR-72**



## **CAUTION**

For Safe Operation  
Read Rules And  
Instructions Carefully

SI NO LEEINGLES, PIDA AYUDA  
A AIGUIEN QUE SI LO LEA  
PARA QUE LE TRADUZCA LAS  
MEDIDAS DE SEGURIDAD.



4 ft. Landscape Rake Shown

## **ATV or Garden Tractor LANDSCAPE RAKE**

**Safety Instructions  
Tractor Preparation  
Operating Instructions**

**Assembly & Mounting  
Maintenance  
Repair Parts**

## **CAUTION**

**THE FOLLOWING SAFETY PRECAUTIONS SHOULD BE THOROUGHLY UNDERSTOOD  
BEFORE ATTEMPTING TO BEGIN ASSEMBLING THIS MACHINE**

1. Select an area for assembly that is clean and free of any debris which might cause persons working on the assembly to trip.
2. Do not lift heavy parts or assemblies. Use crane, jack, tackle, fork trucks or other mechanical devices.
3. Preview the assembly instructions in your operator's manual before proceeding further.
4. If the assembly instructions call for parts or assemblies to be blocked up, use only blocking material that is in good condition and is capable of handling the weight of the assembly to be blocked. Also insure that the blocking material is on a clean, dry surface.
5. Never put hands, or any part of body, under blocked up assemblies if at all possible.
6. After completing assembly, thoroughly inspect the machine to be sure that all nuts, bolts, hydraulic fittings or any other fastened assemblies have been thoroughly tightened.
7. Before operating the machine, thoroughly read the operation section of your operator's manual.
8. Before operating, read the maintenance section of your operator's manual to be sure that any parts requiring lubrication, such as gearboxes, are full, to avoid any possible damage.
9. **Before operating equipment – If you have any questions regarding the proper assembly or operation, contact your dealer or representative.**

# TABLE OF CONTENTS

SI NO LEEINGLES, PIDA AYUDA A  
ALGUIEN QUE SI LO LEA PARA QUE  
LE TRADUZCA LAS MEDIDAS DE  
SEGURIDAD.

WARRANTY .....	2
SAFETY INFORMATION .....	3 - 7
SAFETY SIGNS .....	8
PREPARATION INSTRUCTIONS .....	9 - 11
OPERATING INSTRUCTIONS .....	11 - 12
PARTS LISTS .....	13 - 14

## STATEMENT OF POLICY

It is the policy of Worksaver, Inc. to improve its products where it is possible and practical to do so. Worksaver, Inc. reserves the right to make changes or improvements in design and construction at any time, without incurring the obligation to make these changes on previously manufactured units.

## TO THE OWNER:

Read this manual before using your Pull Type Landscape Rake or Box Scraper. This manual is provided to give you the necessary operating and maintenance instructions for keeping your implement in top operating condition. Please read this manual thoroughly. Understand what each control is for and how to use it. Observe all safety signs on the machine and noted throughout the manual for safe operation of implement. Keep this manual handy for ready reference.

Like all mechanical products, it will require cleaning and upkeep.

Use only genuine Worksaver, Inc. service parts. Substitute parts will void the warranty and may not meet standards required for safe and satisfactory operation. Record the model and serial number of your implement here:

Model: \_\_\_\_\_ Serial Number: \_\_\_\_\_

## RETAIL CUSTOMER'S RESPONSIBILITY

It is the Retail Customer and/or Operator's responsibility to read the Operator's Manual, to operate, lubricate, maintain, and store the product in accordance with all instructions and safety procedures. Failure of the operator to read the Operator's Manual is a misuse of this equipment.

It is the Retail Customer and/or Operator's responsibility to inspect the product and to have any part(s) repaired or replaced when continued operation would cause damage or excessive wear to other parts or cause a safety hazard.

It is the Retail Customer's responsibility to deliver the product to the authorized Worksaver Dealer, from whom he purchased it, for service or replacement of defective parts which are covered by warranty. Repairs to be submitted for warranty consideration must be made within forty-five (45) days of failure.

It is the Retail Customer's responsibility for any cost incurred by the Dealer for traveling to or hauling of the product for the purpose of performing a warranty obligation or inspection.

# LIMITED WARRANTY



Worksaver warrants to the original purchaser of any new Pull Type Landscape Rake, that the equipment be free from defects in material and workmanship for a period of twelve (12) months for non-commercial, state, and municipalities. Use sixty (60) days for commercial use from date of retail sale.

Replacement or repair parts installed in the equipment covered by this warranty are warranted for ninety (90) days from the date of purchase of such part or to the expiration of the applicable new equipment warranty period, whichever occurs later.

Such parts shall be provided at no cost to the user during regular working hours. Worksaver reserves the right to inspect any equipment or parts which are claimed to have been defective in material or workmanship.

## DISCLAIMER OF IMPLIED WARRANTIES & CONSEQUENTIAL DAMAGES

Worksaver's obligation under this warranty, to the extent allowed by law, is in lieu of all warranties, implied or expressed, including implied warranties of merchantability and fitness for a particular purpose and any liability for incidental and consequential damages with respect to the sale or use of the items warranted. Such incidental and consequential damages shall include but not be limited to: transportation charges other than normal freight charges; cost of installation other than cost approved by Worksaver; duty; taxes; charges for normal service or adjustments; loss of crops or any other loss of income; rental of substitute equipment, expenses due to loss, damage, detention or delay in the delivery of equipment or parts resulting from acts beyond the control of Worksaver.

## THIS WARRANTY SHALL NOT APPLY:

1. To vendor items which carry their own warranties, such as hydraulic cylinders, tires, and tubes.
2. If the unit has been subjected to misapplication, abuse, misuse, negligence, fire or other accident.
3. If parts not made or supplied by Worksaver have been used in connection with the unit, if, in sole judgement of Worksaver such use affects its performance, stability, or reliability.
4. If the unit has been altered or repaired outside of an authorized Worksaver dealership in a manner which, in the sole judgement of Worksaver affects its performance, stability or reliability.
5. To normal maintenance service and normal replacement items such as gearbox lubricant, hydraulic fluid, worn tines, or to normal deterioration of such things as rope and exterior finish, due to use or exposure.
6. To expendable or wear items such as teeth, chains, sprockets, belts, springs and other items that in the company's sole judgement is a wear item.

NO EMPLOYEE OR REPRESENTATIVE OF WORKSAVER IS AUTHORIZED TO CHANGE THIS WARRANTY IN ANY WAY OR GRANT ANY OTHER WARRANTY UNLESS SUCH CHANGE IS MADE IN WRITING AND SIGNED BY WORKSAVER'S SERVICE MANAGER, POST OFFICE BOX 100, LITCHFIELD, ILLINOIS 62056-0100.



# To the Owner/Operator/Dealer

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.

## BEFORE YOU START!!

**Read the safety messages on the implement and shown in your manual.  
Observe the rules of safety and common sense!**



**THIS SYMBOL MEANS**

- ATTENTION!
- BECOME ALERT!
- YOUR SAFETY IS INVOLVED!

THIS SAFETY ALERT SYMBOL IDENTIFIES IMPORTANT SAFETY WARNING MESSAGES. CAREFULLY READ EACH WARNING MESSAGE THAT FOLLOWS. FAILURE TO UNDERSTAND AND OBEY A SAFETY WARNING, OR RECOGNIZE A SAFETY HAZARD, COULD RESULT IN AN INJURY OR DEATH TO YOU OR OTHERS AROUND YOU. THE OPERATOR IS ULTIMATELY RESPONSIBLE FOR THE SAFETY OF HIMSELF, AS WELL AS OTHERS, IN THE OPERATING AREA OF THE TRACTOR AND EQUIPMENT.

---

## UNDERSTAND SIGNAL WORDS



### **DANGER**

Indicates an imminently hazardous situation that, if not avoided, **WILL** result in DEATH OR VERY SERIOUS INJURY.



### **WARNING**

Indicates a imminently hazardous situation that, if not avoided, **COULD** result in DEATH OR SERIOUS INJURY.



### **CAUTION**

Indicates a imminently hazardous situation that, if not avoided, **MAY** result in MINOR INJURY.

### **IMPORTANT**

Identifies special instructions or procedures that, if not strictly observed, could result in damage to, or destruction of the machine, attachments or the environment.

**NOTE:** *Identifies points of particular interest for more efficient and convenient operation or repair.*

If you have questions not answered in this manual or require additional copies or the manual is damaged, please contact your dealer or the manufacturer directly.

---

## IMPORTANT SAFETY INFORMATION

Working with equipment can lead to injuries. Read this manual, and the manual for your power unit, before assembly or operating, to acquaint yourself with the machine. It is the equipment owner's responsibility, if this equipment is used by any person other than yourself, is loaned or rented, to make certain that the operator, prior to operating:

1. Reads and understands the operator's manuals.
2. Is instructed in safe and proper use.



The use of this equipment is subject to certain hazards which cannot be protected against by mechanical means or product design. All operators of this equipment must read and understand this entire manual, paying particular attention to safety and operating instructions, prior to using. If there is something in this manual you do not understand, ask your supervisor, or your dealer, to explain it to you.

# SAFETY INSTRUCTIONS (continued)



## EQUIPMENT SAFETY GUIDELINES



Safety of the operator is one of the main concerns in designing and developing a new piece of equipment. Designers and manufacturers build in as many safety features as possible. However, every year many accidents occur which could have been avoided by a few seconds of thought and a more careful approach to handling equipment. You, the operator, can avoid many accidents by observing the following precautions in this section. To avoid personal injury, study the following precautions and insist those working with you, or for you, follow them.



Review the safety instructions with all users annually. Operators should wear proper safety gear.



This equipment is dangerous to children and persons unfamiliar with its operation. The operator should be a responsible adult familiar with machinery and trained in this equipment's operations. **Do not allow persons to operate or assemble this unit until they have read this manual and have developed a thorough understanding of the safety precautions and of how it works.**



To prevent injury or death, use a tractor equipped with a Roll-Over Protective System (ROPS). Do not paint over, remove or deface any safety signs or warning signs on your equipment. Observe all safety signs and practice the instruction on them.



Never exceed the limits of a piece of machinery. If its ability to do a job, or to do so safely, is in question – **DON'T TRY IT.**



Do not modify the equipment in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the equipment.



In addition to the design and configuration of this implement, including Safety Signs and Safety Equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of personnel involved in the operation, transport, maintenance, and storage of the machine. Refer also to Safety Messages and Operation Instructions in each of the appropriate sections of the Tractor and Implement Manuals. Pay close attention to the Safety Signs affixed to the Tractor and the Implement.



## SAFETY SIGNS



Keep safety signs clean and legible at all times.



















Replace safety signs that are missing or have become illegible.

Replaced parts that displayed a safety sign should also display the current sign.

Safety signs are available from your Distributor or Dealer Parts Department or the factory.

# SAFETY INSTRUCTIONS (continued)

-  All equipment is potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes potential hazards and follows reasonable safety practices.
-  When the use of hand tools is required to perform any part of assembly, installation, adjustment, maintaining, repairing, removal, or moving the implement, be sure the tools used are designed and recommended by the tool manufacturer for that specific task.
-  Personal protection equipment including safety glasses, safety shoes, and gloves are recommended during assembly, installation, operation, adjustment, maintaining, repairing, removal, or moving of the implement.
-  Always use two people to handle heavy, unwieldy components during assembly, installation, removal, or moving of the implement.
-  Never place any part of your body where it would be in danger if movement should occur during assembly, installation, operation, maintaining, repairing, removal, or moving the implement.
-  Never place yourself between the tractor or ATV and implement while implement is in operation.
-  Do not work under a raised implement unless it is securely blocked or held in position.
-  Never wrap rope around hand or any part of your body. Injury could occur.
-  Never use alcoholic beverages or drugs which can hinder alertness or coordination while operating equipment. Consult your doctor about operating tractor and implement while taking prescription medications.
-  Do not allow others to ride on the tractor or ATV with an operator. Riders are subject to injury such as being struck by foreign objects or being thrown off. Riders obstruct the operator's view resulting in unsafe operation. **Never allow anyone to ride on the implement!**
-  Before you operate any implement, check over all pins, bolts and connections to be sure all are securely in place. Replace any damaged or worn parts immediately.
-  Do not allow anyone who is not familiar with the safety rules and operation instructions to use this equipment.
-  Never allow children to operate or be around equipment.
-  Do not exceed capacity of the tractor or ATV.
-  Keep alert and watch the front as well as the rear when working with implements.
-  When maneuvering close to buildings or passing through narrow areas, be sure to allow sufficient clearance for the implement and power unit.

# SAFETY INSTRUCTIONS (continued)



Do not operate close to ditches or creeks. Slow down when operating over rough ground.



Always be sure the implement is in the fully raised and locked position when in transport.



Pull from drawbar only. Failure to hitch properly could cause tractor or ATV to flip over, resulting in serious injury or death.



Reduce speed on slopes and sharp turns to minimize tipping or loss of control. Be careful when changing directions on slopes. Do not start or stop suddenly on slopes. Avoid operation on steep slopes.



Never exceed the limits of a piece of machinery. If its ability to do a job, or to do so safely, is in question – **DON'T TRY IT.**



Avoid excessive speed during operation.



Make adjustments only when the implement is attached to the tractor or ATV.



Always ease the tractor or ATV into the load. It may be necessary to reposition and take less “bite” on the material to move it safely.



Watch for and avoid hidden obstructions, i.e., buried pipes, rocks, concrete piers, uneven concrete slabs, stumps, etc., when operating landscape rakes, box scrapers, or other ground engaging implements.



Never operate tractor and implement under trees with low hanging limbs. Operators can be knocked off the tractor and then run over by the implement.



Stay alert for holes, rocks and roots in the terrain and other hidden hazards. Keep away from drop-offs.



Use extreme care and maintain minimum ground speed when transporting on hillside, over rough ground and when operating close to ditches or fences. Be careful when turning sharp corners.



Pass diagonally through sharp dips and avoid sharp drops to prevent “hanging up” tractor and implement. Practice will improve your skills in maneuvering rough terrain.



Always angle down slopes; never across the face. Avoid operation on steep slopes. Slow down on sharp turns and slopes to prevent tipping and/or loss of control.

















Always shut off power unit and shift to “Park” or set brakes when leaving tractor or ATV. Always lower implement to ground. Remove key when leaving tractor or ATV unattended.



Before operating equipment: if you have any questions regarding the proper assembly or operation, contact your dealer or representative.

# **SAFETY INSTRUCTIONS (continued)**


-  Know your controls and how to stop tractor or ATV, engine, and implement quickly in an emergency. Read this manual and the one provided with your tractor or ATV.
-  Be certain the tractor or ATV is in neutral or park position before starting engine.
-  Always ease the tractor or ATV into the load.
-  Be careful to avoid catching the implement on stumps or other immovable objects.
-  Use extra care when working on slopes.
-  Always tie operator's end of rope to towing vehicle. Do not let rope drag on ground. Trim off excess rope length. Never wrap rope around hand or any part of your body.
-  Keep all persons away from operator control area while performing adjustments, service, or maintenance.
-  Where replacement parts are necessary for periodic maintenance and servicing, genuine factory replacement parts must be used to restore your equipment to original specifications. The manufacturer will not claim responsibility for use of unapproved parts and/or accessories and other damages as a result of their use.
-  If equipment has been altered in any way from original design, the manufacturer does not accept any liability for injury or warranty.
-  Following operation, or when unhooking, stop the tractor or ATV, set the brakes, shut off the engine and remove the ignition keys.
-  Store the unit in an area away from human activity. Do not park equipment where it will be exposed to livestock for long periods of time. Damage and livestock injury could result.
-  Do not permit children to play on or around the stored unit.
-  Make sure all parked machines are on a hard, level surface and engage all safety devices.
-  If blocking is used, make sure it is solid and secure before leaving area.



# SAFETY SIGNS



**BE CAREFUL!** Use a clean, damp cloth to clean safety decals. Avoid spraying to close to decals when using a pressure washer; high-pressure water can enter through very small scratches or under edges of decals causing them to peel or come off.

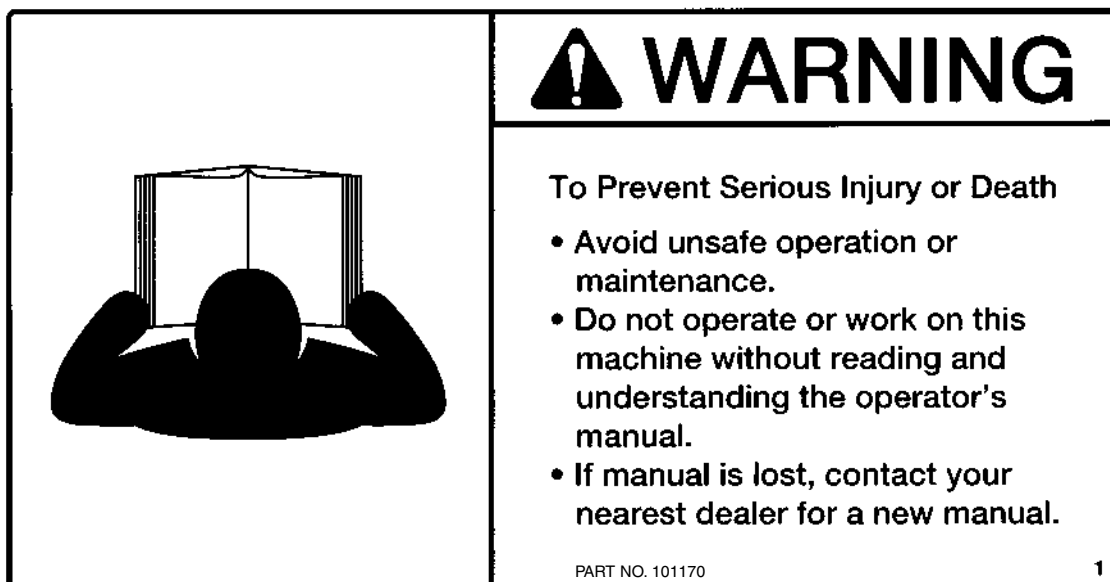

**REMEMBER:** If Safety Signs have been damaged, removed, become illegible or parts replaced without Signs, new Safety Signs must be applied. New Safety Signs are available from your authorized distributor or factory.

# TRACTOR/ATV INSTRUCTIONS

## TRACTOR/ATV REQUIREMENTS AND PREPARATION

The PLR Series landscape rakes are designed for small lawn/garden tractors and ATV units equipped with a rear pull type hitch.

For the different width landscape rake units, we recommend the following minimum size lawn/garden tractor:

<u>Rake</u>	<u>Min. Tractor H.P.</u>
PLR-48	10-12 H.P.
PLR-60	12-15 H.P.
PLR-72	15-18 H.P.

ATV units need to have a low gear and be of sufficient size (see the chart above for tractors and use a conversion of 12 cc engine size equals 1 hp).

Small tractors may need wheel weights to have enough traction.



### CAUTION

Be sure tractor or ATV is in good condition. Read all the safety precautions and make sure all operators are familiar with the safety rules of operation.


## ASSEMBLY

For instruction reference, the terms front or rear are based on the operator facing forward on the power unit, thus front is toward the front of the power unit and the rear is to the rear of the power unit.

It is suggested that all the instructions be read before beginning assembly.

Check the exploded view of the landscape rake in this manual to get an idea of the relationship between the parts.

Remove contents from shipping carton and lay on a clean surface. Check to make sure all items are present prior to assembly. The rake tinebar assembly has the teeth installed.

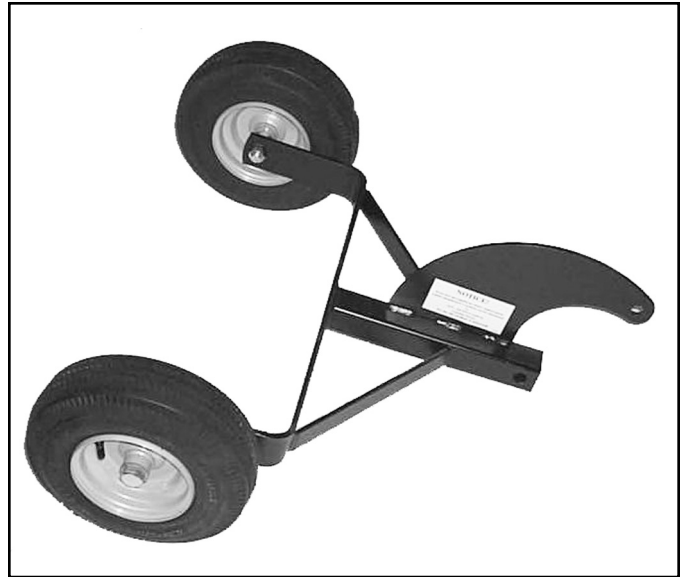


Using the  $\frac{3}{4}$ " – 10NC x 5" hex head bolts attach the wheels to the wheel pivot assembly and secure in place with  $\frac{3}{4}$ " 10NC nylock hex jam nut. **Note:** Make sure that the  $\frac{3}{4}$ " full hex nut and  $\frac{3}{4}$ " flat washer are installed on the  $\frac{3}{4}$ " x 5" bolt prior to the bolt being installed to the frame. (See exploded parts view in owners manual.) Make sure wheel turns freely.




With the aid of another person, position the wheel assembly in an upright position and attach the beam hitch assembly to it using the  $\frac{3}{4}$ " – 10NC x  $3\frac{1}{2}$ " hex head bolt securing with  $\frac{3}{4}$ " – 10NC nylock hex jam. The chassis (main frame) is now created. **Note:** Do not over tighten  $\frac{3}{4}$ " x  $3\frac{1}{2}$ " bolt as it is the pivot joint and the parts need to move as the frame is raised and lowered.

# INSTRUCTIONS (continued)

Lower the main frame and attach the leveling arm and plate assembly to the left hand side (standing behind unit) of the beam hitch assembly. Use the two  $\frac{1}{2}$ " – 13NC x 3" hex head bolts with lock washers and hex nuts. Make sure units is assembled in right direction and tighten bolts.

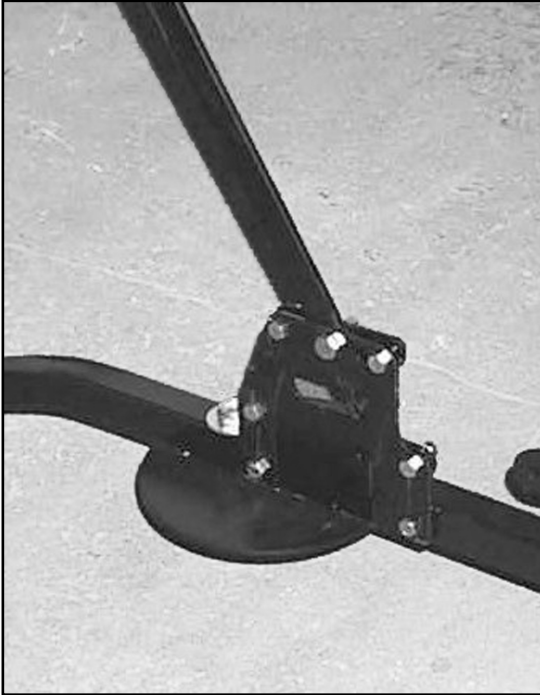


Install top link assembly securing it to the wheel pivot assembly and to the leveling handle assembly with two  $\frac{5}{8}$ " – 11NC x 2" hex head bolt securing with  $\frac{5}{8}$ " spring lock washers and  $\frac{5}{8}$ " – 11NC hex nuts. Tighten bolts.

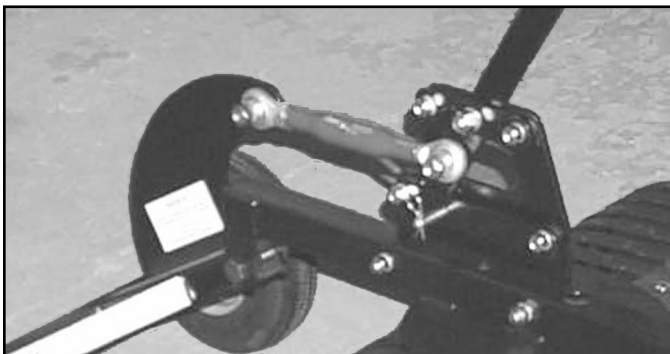

The two main subassemblies of the landscape rake are heavy and awkward to handle. It is recommended that you have one or two helpers to complete the assembly.

It is suggested that you hook the clevis hitch of the main frame to your tractor or ATV before assembling. If this is not possible, block the hitch off the ground 5-6 inches.

Slide the landscape rake tinebar assembly under the main frame. Raise the front of the tinebar and block below the angle tinebar. Insert the 1" x 4" hex head bolt into the bottom of the center angle adjustment plate on the tinebar and then through the 1" diameter hole in the main frame. (Threaded end up). Place a 1" flat washer on the bolt and then install the 1" nylock hex nut. Tighten this nut until it is just lightly snug – you want to be able to angle the tinebar but have a minimum amount of looseness.

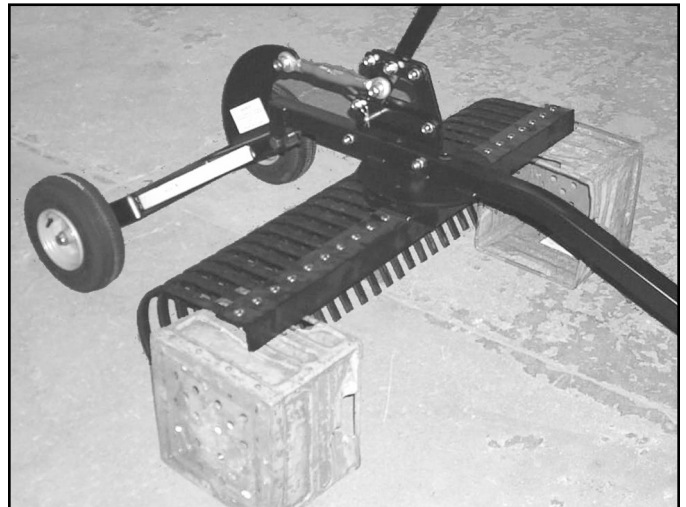

Install the pull rope (provided) into hole of the level arm and secure with a knot.



Install one shift pin in the handle leveling assembly.

Install the 2nd shift pin in the rake tinebar positioning hole to position the tinebar.

# INSTRUCTIONS (continued)

On the landscape rake, set the desired angle of the tinebar assembly and install the angle shift pin.

The operating height of the landscape rake is set by the turnbuckle adjustment. If the unit is on a flat level surface (concrete slab) you can set the depth of operation by raising the wheels off the surface. It is recommended that changes in operating depth be kept small. After operating the attachment a few times, you will get to know how much change your power unit can handle.

Tie one end of the pull rope to the upper end of the lift handle. The other end of the rope should be lightly tied to your tractor or ATV. Trim off the excess length of rope (if any). Tape or braid the end of the rope to keep it from fraying.



## CAUTION

**Always tie operator's end of rope to towing vehicle. Trim excess length of rope. Do NOT let the rope drag on the ground.**



## WARNING

**Never wrap rope around hand or any part of your body. Injury could occur.**



## WARNING

**Be sure power unit engine is off and key is removed before making any adjustments.**

## OPERATION

While standing by the landscape rake, pull forward on the handle and remove the transport lock pin, then slowly release your pressure on the handle and let the handle swing to the rear. Make sure your feet are clear as the tinebar lowers to the ground.

There is an extra set of holes at the top of the lever quadrant to store the transport lock pin while the implement is in use.

To place the implement into the transport position, just reverse the above procedure.

As you operate the landscape rake, you need to pull on the rope and pull the handle forward to dump the material or to make a sharp turn. Releasing the rope allows the implement to return to its depth setting as controlled by the turnbuckle.

## GRADING

Adjust the turnbuckle for the amount of cut you want to take. Set the rake angle adjustment as desired – straight for grading or angles for a windrowing effect.

It is recommended to operate the rake at a slow speed (max. 3 mph) to give ample time for fine material to flow through the tines.

When angle grading with the rake, the tinebar should be angled only enough to allow material to slide across easily.

## LEVELING

The rake tinebar should be straight across (ie: 90° to the line of travel). The gauge wheels will make the leveling operation much easier. It will usually take several passes over the same area to obtain the desired result.

## RAKING

Light vegetative trash, dirt clods, or rocks may be raked into piles or into windows for easier pick up. DO NOT overload rake tines – remove large rocks, roots or limbs before using the implement.

If you have a gravel or loose stone driveway, setting the rake at an angle and making several passes in the grass along each side of the drive will rake the stones out of the grass and back into the driveway.



## CAUTION

**Watch for and avoid catching the rake on stumps, large rocks, or other immovable objects.**

**INCORPORATING SEED:** Seed is best incorporated by making two passes in diagonal directions. Consult your seed supplier or reference book for the recommended seed depth. Set the rake straight and operate the rake at two times the recommended seed depth. Grass seed, for example, should be covered approximately 1/4". Operate the rake at 1/2" penetration and make two passes in diagonal directions.

# INSTRUCTIONS (continued)

## **MAINTENANCE**

---

Straighten or replace any tines which may have bent due to hitting buried or solid objects.

Check the angle shift pin for excessive wear and replace if necessary.

Repaint parts where paint is worn or scratched to prevent rust.

Check all bolts and nuts to be sure they are tight except nylock nut pivot bolts – these should be just snug.

Periodically oil the following:

Turnbuckle threads  
Pivot points

## **STORING SAFELY**

---

At the end of the working season or when the implement will not be used for a long period, it is good practice to clean off any dirt that may have accumulated.

Inspect the implement for loose, damaged or worn parts and adjust or replace if needed.

Repaint parts where paint is worn or scratched to prevent rust.

Store in a clean, dry place away from where children play.


- 
- 
- ✓ Keep children away from danger all day, every day.
  - ✓ Equip tractors with rollover protection (ROPS) and keep all machinery guards in place.
  - ✓ Please work, drive, play, and live each day with care and concern for your safety and that of your family and fellow citizens.

# **READ AND OBEY ALL SAFETY WARNINGS!!**

# PLR LANDSCAPE RAKE PARTS LIST

PLR Chassis Assembly				Rake Assemblies			
Ref. No.	Part No.	Description	No. Req'd.	Ref. No.	Part No.	Description	No. Req'd.
1	341937	Beam Hitch Weldment	1	26	341858	Tinebar Weldment PLR-48	1
2	341930	Wheel Pivot Weldment	1		341859	Tinebar Weldment PLR-60	1
3	341926	Adjustment Plate	1		341901	Tinebar Weldment PLR-72	1
4	341927	Upper Leveling Arm Bracket	1	27	341704	Rake Tooth PLR-48	24
5	341928	Lower Leveling Arm Bracket	1			Rake Tooth PLR-60	30
6	341929	Leveling Arm	1			Rake Tooth PLR-72	36
7	341935	Wheel Assembly	2	28	341705	Tooth Support PLR-48	4
8	590125	Top Link, AK-300, Category 0	1			Tooth Support PLR-60	5
9	2503024	Bolt, 3/4"-10NC x 3-1/2", Hex Head	1			Tooth Support PLR-72	6
10	2500075	Nut, 3/4"-10NC, Nylock Hex Jam	3	29	2503103	Bolt 3/8"-16NC x 1 1/2" Carriage Head (PLR-48)	24
11	2503033	Bolt, 3/4"-10NC x 5", Hex Head	2			Bolt 3/8"-16NC x 1 1/2" Carriage Head (PLR-60)	30
12	2501002	Washer, 3/4", Medium Flat	2			Bolt 3/8"-16NC x 1 1/2" Carriage Head (PLR-72)	36
13	2500002	Nut, 3/4"-10NC, Hex	2	30	2500081	Nut 3/8"-16NC Whiz Flange Hex (PLR-48)	24
14	2503012	Bolt, 1/2"-13NC x 3" Gr. 2, Hex Head	2			Nut 3/8"-16NC Whiz Flange Hex (PLR-60)	30
15	2503004	Bolt, 1/2"-13NC x 1-1/2", Hex Head	4			Nut 3/8"-16NC Whiz Flange Hex (PLR-72)	36
16	2502002	Washer, 1/2", Spring Lock	6	31	341941	Bushing, Spacer	4
17	2500003	Nut, 1/2"-13NC, Hex	6	NS	101148	Safety Sign - Caution (Safe Operation)	1
18	2503048	Bolt, 5/8"-11NC x 2", Hex Head	3				
19	2502007	Washer, 5/8", Spring Lock	3				
20	2500013	Nut, 5/8"-11NC, Hex	3				
21	341857	Shift Pin, 1/2" x 3-1/4"	2				
22	341936	Rope, 5/16", Braided Sisal	1				
23	2503226	Bolt, 1"-8NC x 4", Hex Head	1				
24	2501001	Washer, 1", Medium Flat	2				
25	2500085	Nut, 1"-8NC, Nylock Hex Jam	1				

# PLR LANDSCAPE RAKE PARTS DRAWING

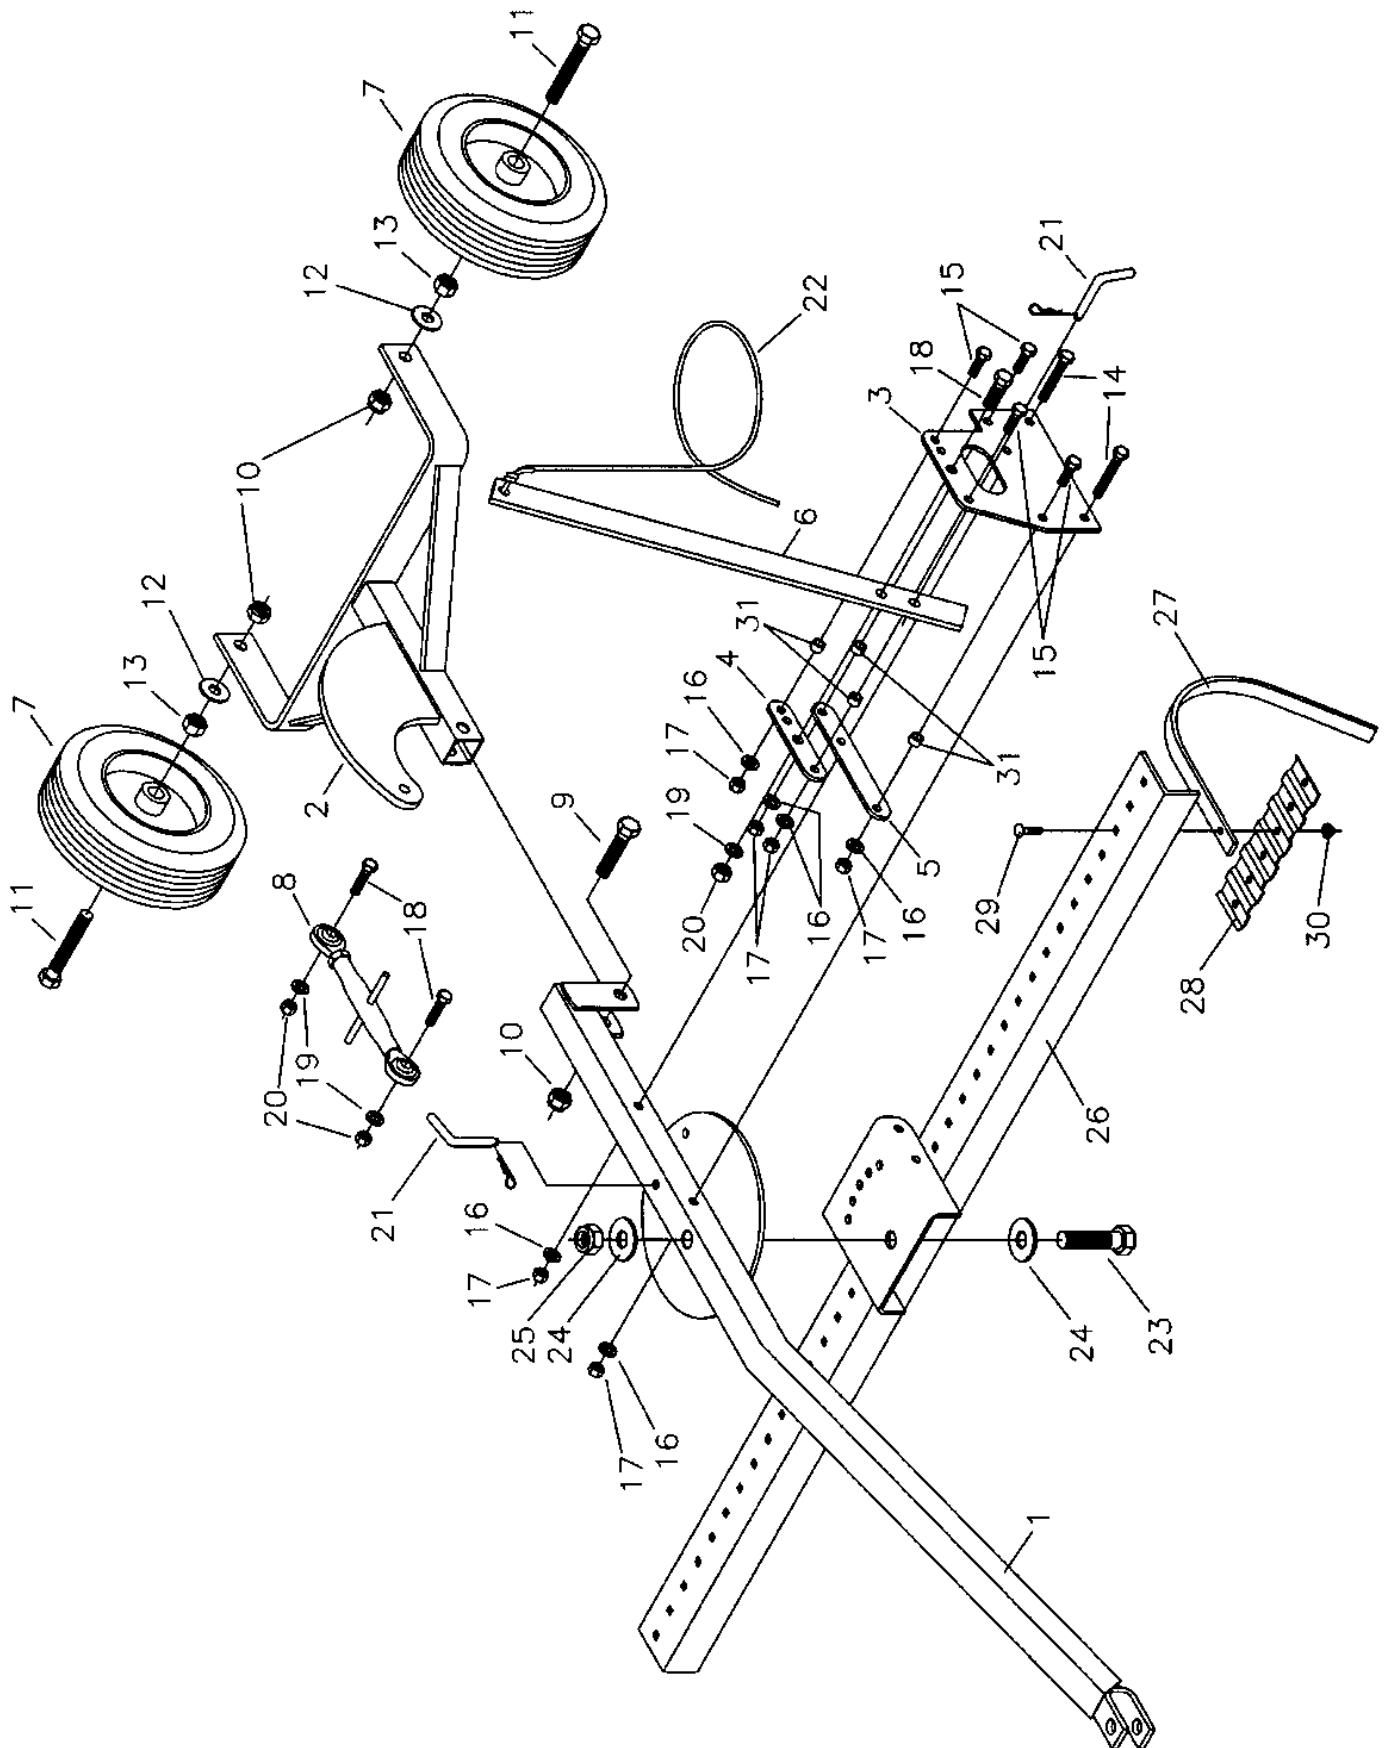

# **SAFETY REQUIREMENTS**

**AVOID ACCIDENTS BY FOLLOWING ALL OF THE SAFETY REQUIREMENTS LISTED BELOW.**

- Machinery should be operated only by those who are responsible and are authorized to do so.
- Stop the engine, lower all equipment, lock the brakes, and remove the ignition key before dismounting from the tractor.
- Never stand between power unit and implement while power unit is being backed to hitch.
- Loose fitting clothing should not be worn, to avoid catching on various parts.
- Detach implement in area where children normally do not play.
- When performing adjustments or maintenance on an implement, first lower it to the ground or block it securely at a workable height.
- Only a qualified operator should be permitted on tractor or ATV when in operation; no riders allowed.
- Make certain everyone is in the clear before starting tractor or raising or lowering equipment.
- Operate the tractor or ATV and implement only while seated in the driver's seat.
- Reduce speed when transporting mounted implements to avoid bouncing and momentary loss of steering control.
- A heavy load can cause instability of the tractor. Use extreme care during road travel. Slow down on turns and watch out for bumps. Tractor may need front counterweights to counter-balance the weight of the implement.
- Reduce speed on hillsides or curves so there is no danger of tipping.
- Avoid driving too close to the edge of ditches or creeks.
- Do not transport implement on public roads without reflectors and slow moving vehicle emblem in daylight and with approved warning lights at night and other periods of poor visibility.
- Due to the width of some implements, use extra caution on highways, farm roads, and when approaching gates.
- Always be sure the implement is in the proper position for transport.
- Keep alert and watch the front as well as the rear when working with the implement.

## **OWNER'S/ OPERATOR'S MANUAL**

### **MODEL NO.'s**

**PLR-48**

**PLR-60**

**PLR-72**

**WHEN ORDERING REPAIR  
PARTS, ALWAYS GIVE THE  
FOLLOWING INFORMATION:**

1. PART NUMBER
2. PART DESCRIPTION
3. MODEL NUMBER
4. NAME OF ITEM

APRIL 2016

## **PULL TYPE LANDSCAPE RAKE**

**Keep children away from danger all day,  
every day . . .**

**Please work, drive, play and live each day  
with care and concern for your safety and  
that of your family and fellow citizens.**

**MAKE EVERY DAY  
A HOLIDAY  
FROM ACCIDENTS!**

## **WORKSAVER, INC.**

P.O. BOX 100 LITCHFIELD, IL 62056-0100 (217) 324-5973  
WEB: <http://www.worksaver.com> E-MAIL: [sales@worksaver.com](mailto:sales@worksaver.com)